

Assembly Instructions

Full Size Weathervane

(Without RETAINING Hook)

COPPER SPACER BALL (SMALL)



BRASS DIRECTIONALS



COPPER BALL (LARGE)




SMALL ROD



BRASS RING

LARGE ROD (18")

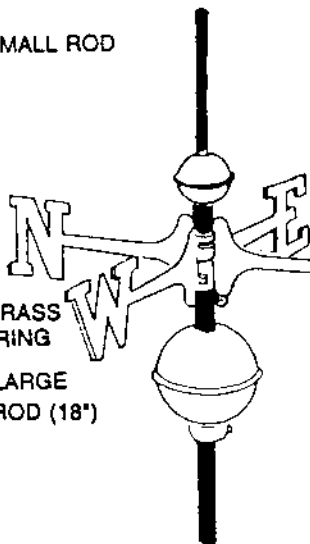


ASSEMBLED VIEW

YOUR PACKAGE INCLUDES THE FOLLOWING PIECES:

- 1 FIGURE (Horse, Eagle, Whale, etc. Whichever one you purchased.)
- 1 Small Copper Ball
- 1 Set of Brass Directionals
- 1 Large Copper Ball
- 1 Brass Ring
- 1 Small Iron Threaded Rod
- 1 Large Iron Rod (18")

1



POSITION BRASS RING OVER LARGE ROD. TIGHTEN SET SCREW


2



THREAD SMALL ROD INTO LARGE ROD. TIGHTEN FIRMLY WITH PLIERS.


3

SLIDE LARGE BALL DOWN ROD TO BRASS RING.

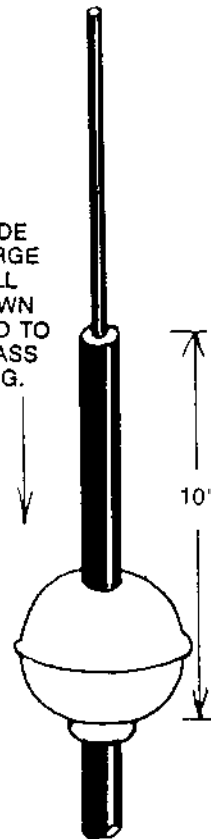


4

INTERLOCK DIRECTIONALS. SLIDE ONTO ROD. TIGHTEN SET SCREWS.

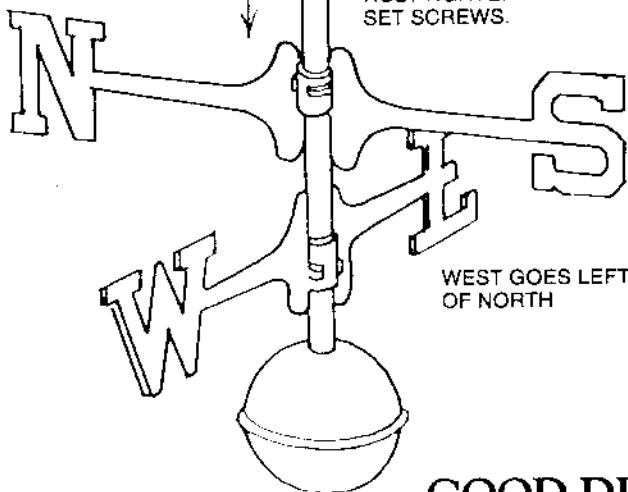

WEST GOES LEFT OF NORTH

5

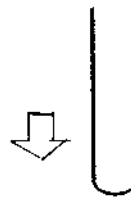

BRASS BOTTOM OF WEATHERVANE TUBE SLIDES OVER SMALL ROD.

APPLY COMMON GREASE TO ROD SO VANE WILL ROTATE FREELY.

FINAL STEP... SLIDE WEATHERVANE FIGURE ONTO SMALL ROD... ENJOY!



GOOD DIRECTIONS,™ INC.